



Y/R

Starting relay

Light switch

Highlow Beam Switch

Turning Light switch

Trimmer switch

Electric horn

Speed Sensor

Light Controller

Speckmeter

Turning light (from right)

Turning light (from left)

Headlight 120V/3V

Position light 120V 0.5V

Injection

Throttle valve sensor

Cylinder temperature sensor

Gasoline pump

Oxygen sensor

Idle stepper motor sensor

Intake temperature sensor

Diagnosis connector

1# Gr ECU J1

2# BLACK ECU J2

Battery (12V, 70Ah)

Starting relay

Flasher

Electric horn

Speedometer

Tachometer

Light Controller

Headlight

Position light

Injection

Throttle valve sensor

Cylinder temperature sensor

Gasoline pump

Oxygen sensor

Idle stepper motor sensor

Intake temperature sensor

Diagnosis connector

1# Gr ECU J1

2# BLACK ECU J2

Battery (12V, 70Ah)

Starting relay

Flasher

Electric horn

Speedometer

Tachometer

Light Controller

Headlight

Position light

Injection

