



- ECU**
- 1 Gnd
 - 2 RPM out dash
 - 3 Second Air Valve
 - 4 CPS -
 - 5 Fan RLY
 - 6 Tilt Switch
 - 7 YBK (KEV)
 - 8 Diagnosis
 - 9 Injection
 - 10 Ignition
 - 11 MLL
 - 12 Oxygen sensor
 - 13 CPS +
 - 14 BATTERY +
 - 15 Cylinder TEMP. sensor
 - 16 Speed input/Clear in
 - 17 Side switch
 - 18 Fuel pmp
- Speedometer**
- G
 - Y/W
 - B
 - Br/R
 - Y/G
 - B/O
 - L
 - P
 - Lb
 - Gr/W
 - R
- Light switch**
- G
 - Gr
 - O
 - Lb
 - Y/R
 - Gr/B
 - 0
 - Y/A
 - O/B
 - G/R
 - B/W
- Ignition**
- G
 - R
 - B
- FUEL PUMP**
- B/O
 - G
- Relay 1**
- B
 - Br/W
 - B
 - B/W
- Relay 2**
- R/W
 - B/O
 - R/W
 - L/Y
- Turnip switch**
- L
 - Gr
 - B
- Turning Light Switch**
- L
 - R
 - 0
 - Gr/Lb
- High/Low Beam Switch**
- L
 - R
 - P
 - W
- Left switch**
- W
 - L
 - Gr
 - O
 - Lb
 - P
 - Lg
 - C
 - Lb
 - W
 - G
 - P
 - O
- Ex - light**
- W
 - G
 - P
 - O
- Turning light (front right)**
- Lb
- Headlight 35W/35W**
- W
 - G
 - P
 - O
- Turning light (front left)**
- O
- Turning light (rear right)**
- Lb
- Turning light (rear left)**
- O
- Rear Brake Switch**
- G/Y
 - B
 - G/Y
- Front Brake Switch**
- B
 - G/Y
 - B
 - G/Y
- Speedometer**
- Speed Sensor**
- B
 - Y/C
 - G
- Diagnosis connector**
- G
 - Y
 - R
- Side Stand Switch**
- G/R
 - G
 - B/W
- Sensor Fuel**
- Y/W
 - G/B
- Oxygen sensor 1**
- G
 - Br/Y
 - R/W
 - W
- Cylinder TEMP. sensor**
- C
 - A
 - G
- Injection**
- B
 - A
 - Br/W
 - R/W
- ignition coil**
- R/W
 - B/Y
- Starting Motor Assy**
- Y/R
 - C/R
 - B/W
 - R
- Controller**
- L/W
 - G
 - C
 - B
 - P
- Rectifier**
- Y
 - G
 - C
 - R
- Magneto**
- Y
 - G/W
 - C/W
 - Y
 - Y
- Trigger 1**
- L/W
 - L
- Trigger 2**
- L
 - B/L
- Flasher**
- Gr
 - B
- Electric horn**
- Lg
 - B
- USB**
- R
 - G
- 12V 7Ah battery**
- Fuse 15A**
- Starting relay**
- Y/R
 - C/R
 - B/W
 - R