



Light switch

Turning light (front right) Headlight 35W/35W Ex-light (front left) Turning light (front left)

Left switch

Trumpet switch

High/Low Beam Switch

Turning Light Switch

flasher

Electric horn

Trigger 1

Magneto

Trigger 2

Controller

Rectifier

USB

battery

starting relay

Starting Motor Assy

signal converter

Turning light (rear right) license plate lamp(5W)

Turning light (rear left)

Tail light

brake light

Diagnosis connector

Side Stand Switch

Sensor Fuel

Oxygen sensor

Cylinder sensor

Injection

Ignition coil

Front Brake Switch

Rear Brake Switch

Speedometer

Ignition

FUEL PUMP

Relay1

Relay2

Gasoline pump

ECU