



Turning light (front right)
 Headlight 35W/35W
 Ex-light
 Turning light (front left)

Trumpet switch

Turning Light Switch

High/Low Beam Switch

Left switch

Rear Brake Switch

Front Brake Switch

Speedometer

Ignition

Ignition

Starting Switch

Starting Switch

- 1 +
- 2 K-line
- 3 CRANK-
- 4 CRANK+
- 5 Gnd
- 6 Coi1
- 7 02 heater
- 8 ASD
- 9 ACT3
- 10 GND Sensors
- 11 5V Sensors
- 12 Speed-in
- 13 LAMP_MIL
- 14 TPS
- 15 Sensor 02+
- 16 ACT2
- 17 MTC engine
- 18 ACT1

Fuse 10A

Rectifier

Magneto

Electric horn

frigger

flasher

battery

starting relay

Starting Motor Assy

Turning light (rear right)

Turning light (rear left)

Tail Light

Start valve

Side Stand Switch

Sensor Fuel

Oxygen sensor

TPS sensor

Cylinder temperature sensor

Ignition coil

IDLE Sol

AUX Sol

Main Sol

USB

Relay

Starting Switch

Starting Switch

Starting Switch

Starting Switch

Starting Switch

Starting Switch