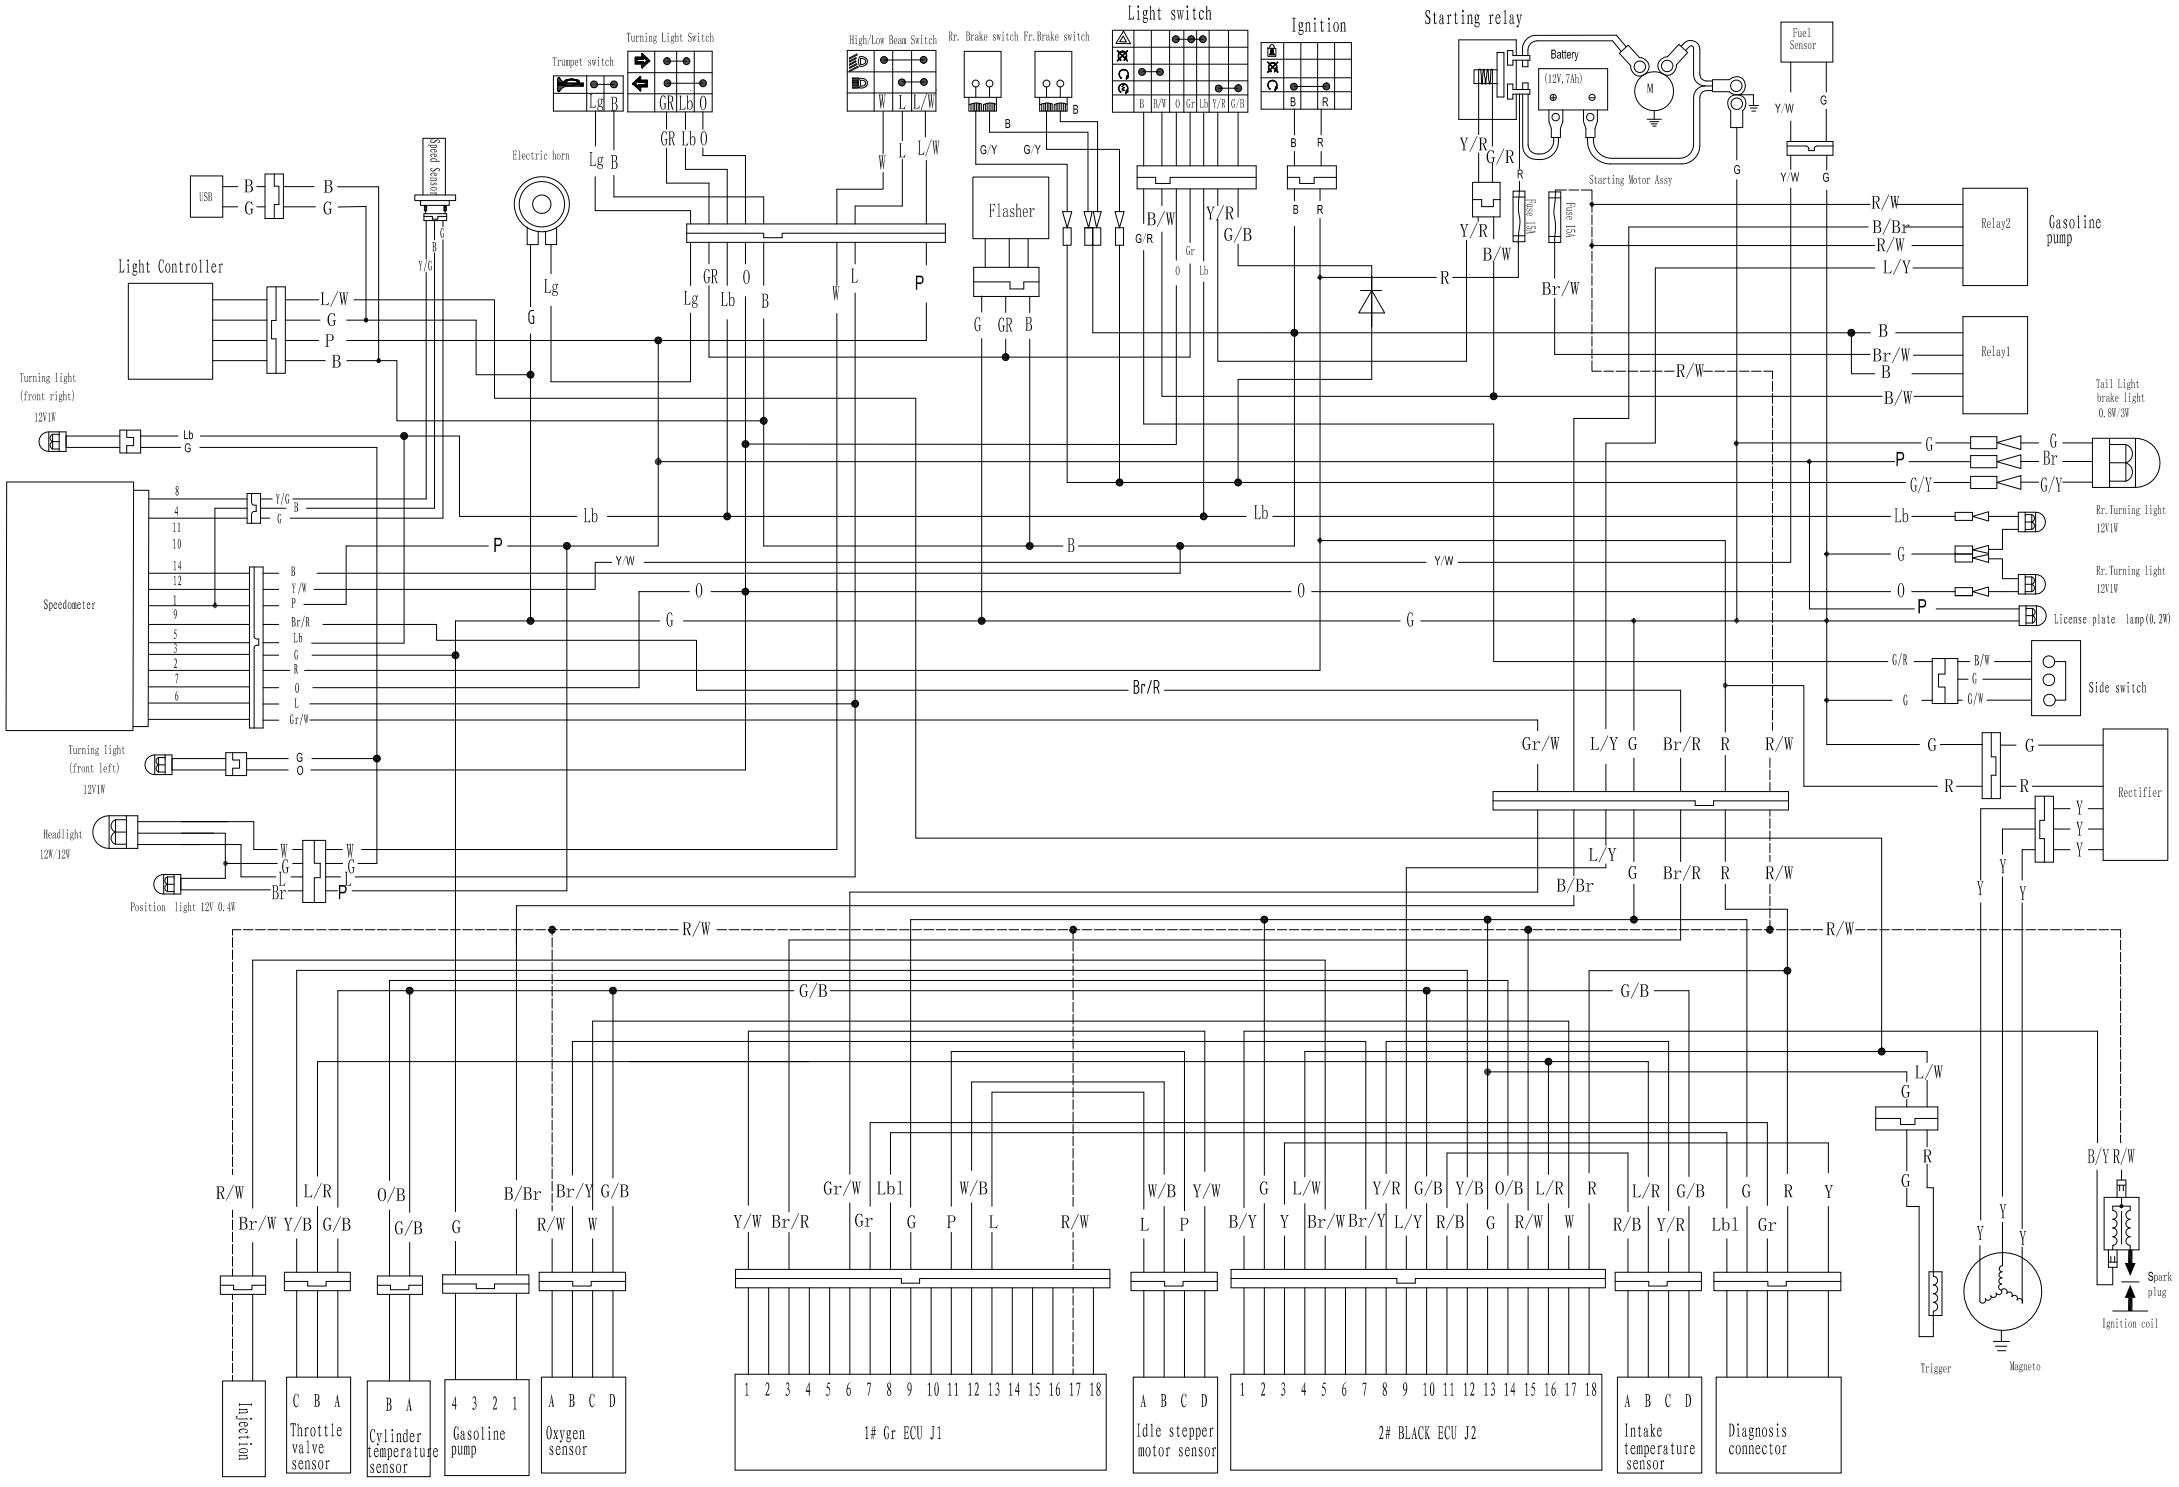
Light switch
Ignition
Starting relay
Battery
(12V, 7Ah)
Starting Motor Assy
Fuse 15A
Fuse 15A
Fuel Sensor
Relay2
Gasoline pump
Relay1
Tail Light brake light 0.8W/3W
Rr.Turning light 12V1W
Rr.Turning light 12V1W
License plate lamp(0.2W)
Side switch
Rectifier
Trumpet switch
Turning Light Switch
High/Low Beam Switch
Rr. Brake switch
Fr.Brake switch
Flasher
Electric horn
Speed Sensor
USB
Light Controller
Speedometer
Turning light (front right) 12V1W
Turning light (front left) 12V1W
Headlight 12W/12V
Position light 12V 0.4W
Spark plug
Ignition coil
Trigger
Magneto
Injection
Throttle valve sensor
Cylinder temperature sensor
Gasoline pump
Oxygen sensor
1# Gr ECU J1
Idle stepper motor sensor
2# BLACK ECU J2
Intake temperature sensor
Diagnosis connector