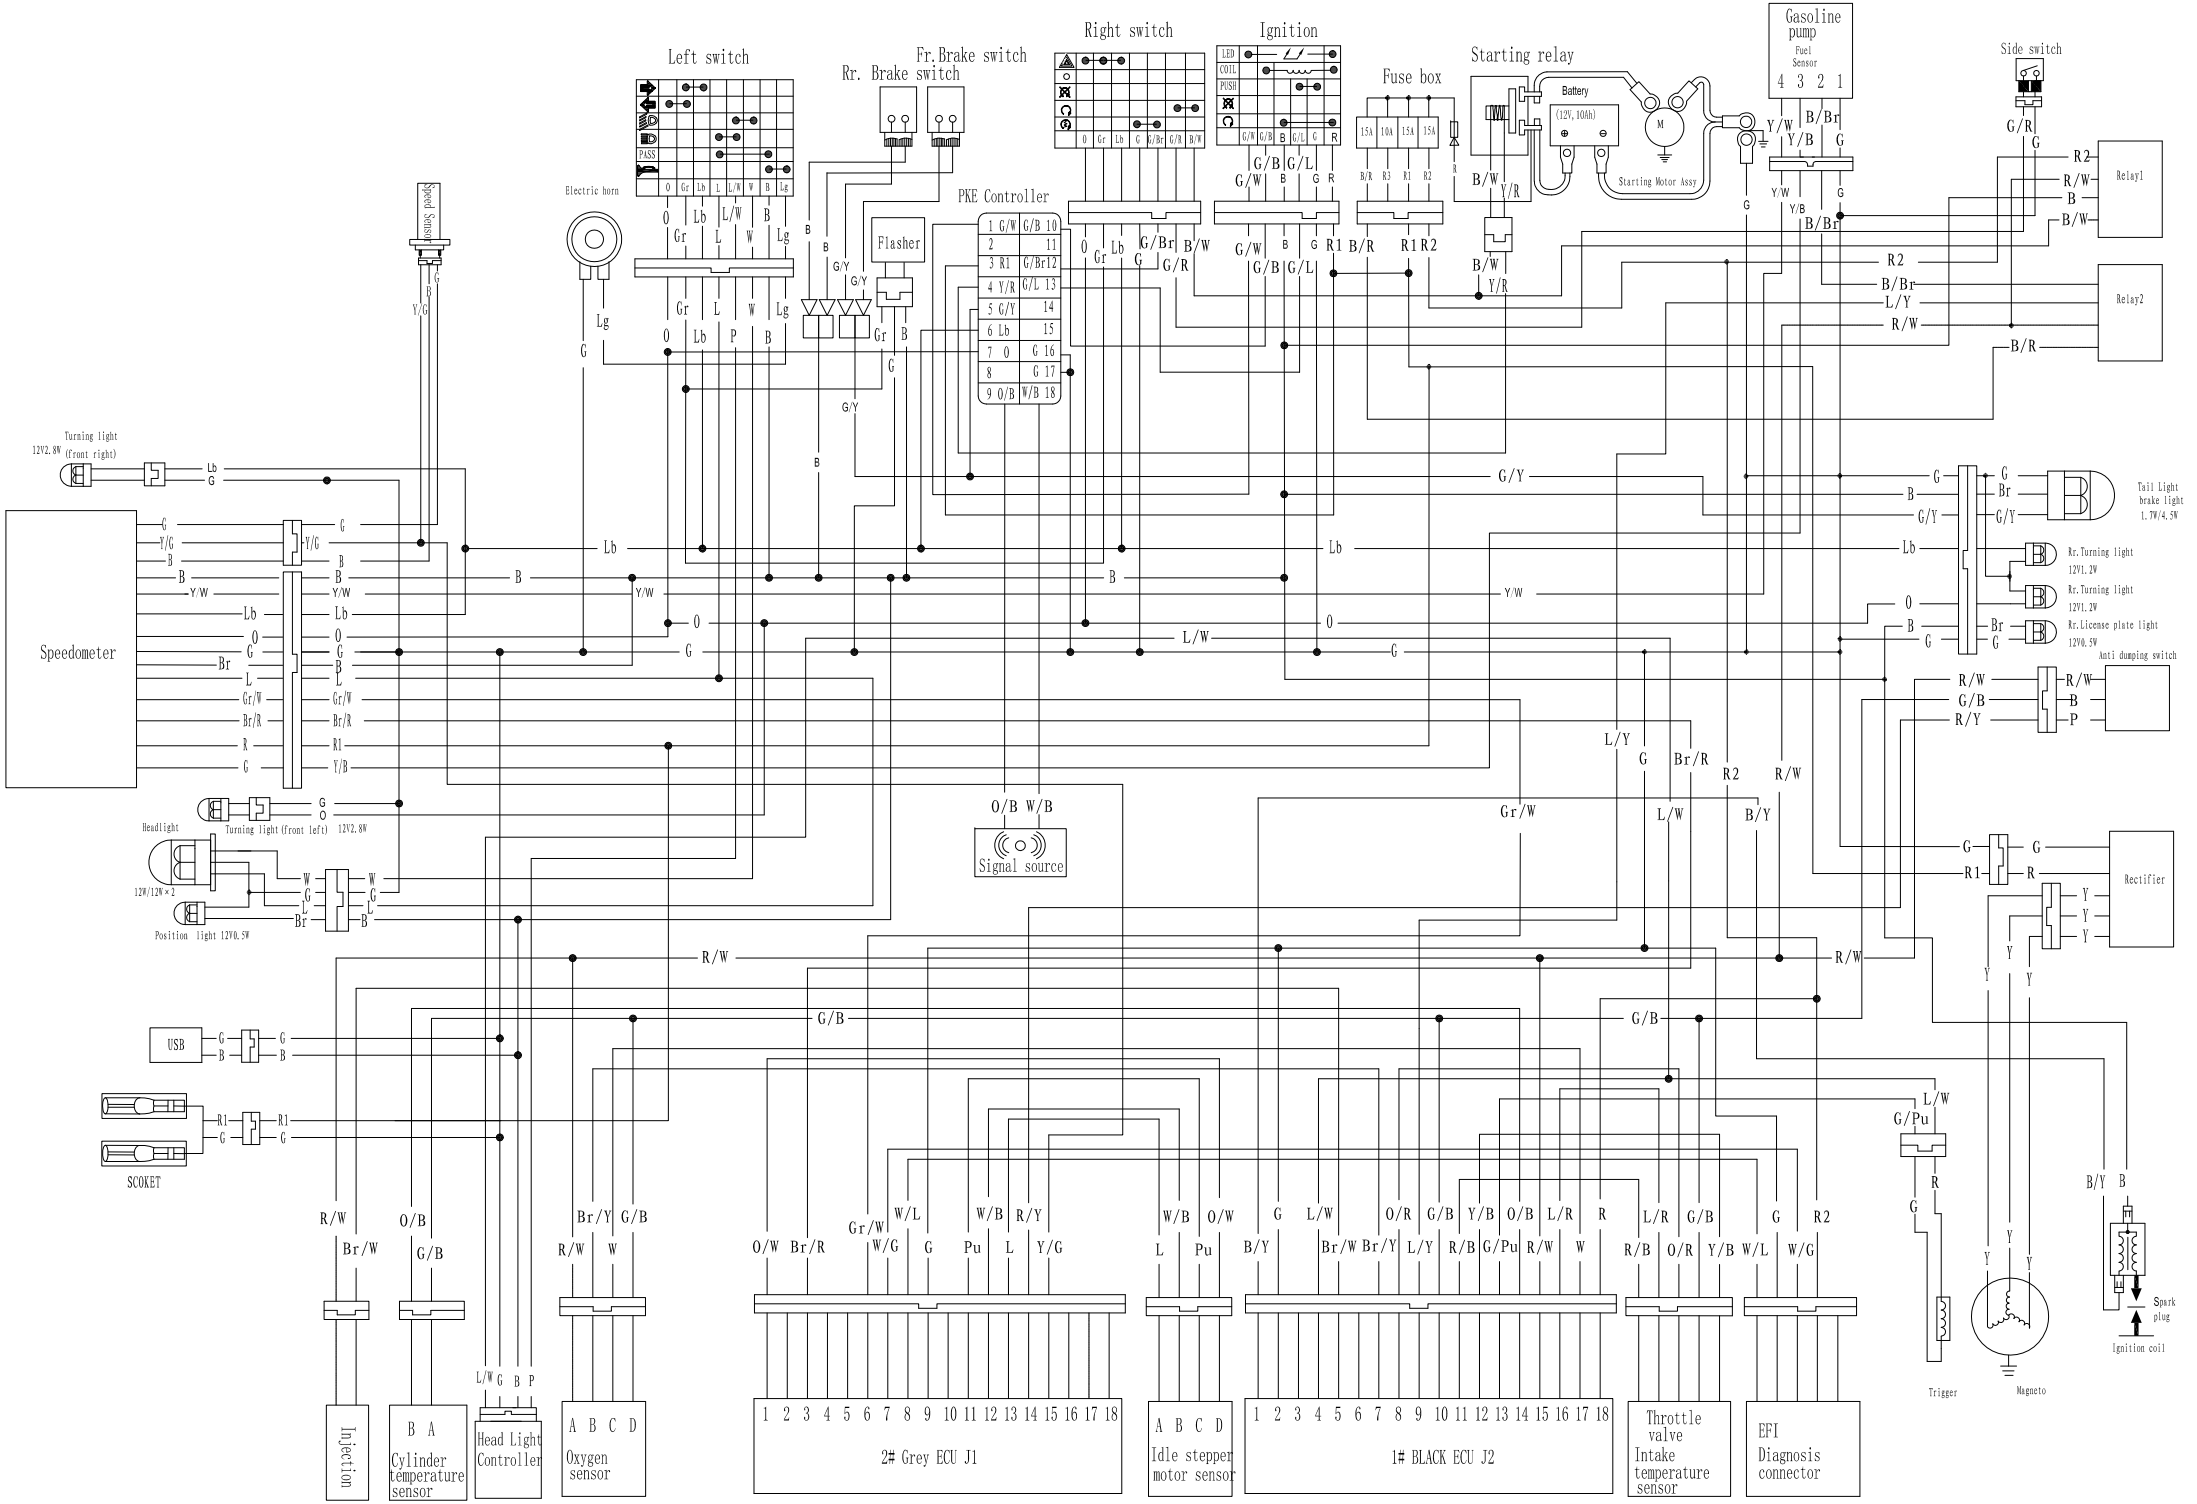
Left switch
Rr. Brake switch
Fr.Brake switch
Right switch
Ignition
Fuse box
Starting relay
Battery
(12V, 10Ah)
Starting Motor Assy
Gasoline pump
Fuel Sensor
Side switch
Relay1
Relay2
Electric horn
Speed Sensor
PKE Controller
Flasher
Speedometer
Turning light (Front right) 12V2.8W
Turning light (front left) 12V2.8W
Headlight 12W/12W×2
Position light 12V0.5W
Tail Light brake light 1.7W/4.5W
Rr.Turning light 12V1.2W
Rr.Turning light 12V1.2W
Rr.License plate light 12V0.5W
Anti dumping switch
Signal source
Rectifier
USB
SCOKET
Trigger
Magneto
Spark plug
Ignition coil
Injection
Cylinder temperature sensor
Head Light Controller
Oxygen sensor
2# Grey ECU J1
Idle stepper motor sensor
1# BLACK ECU J2
Throttle valve Intake temperature sensor
EFI Diagnosis connector