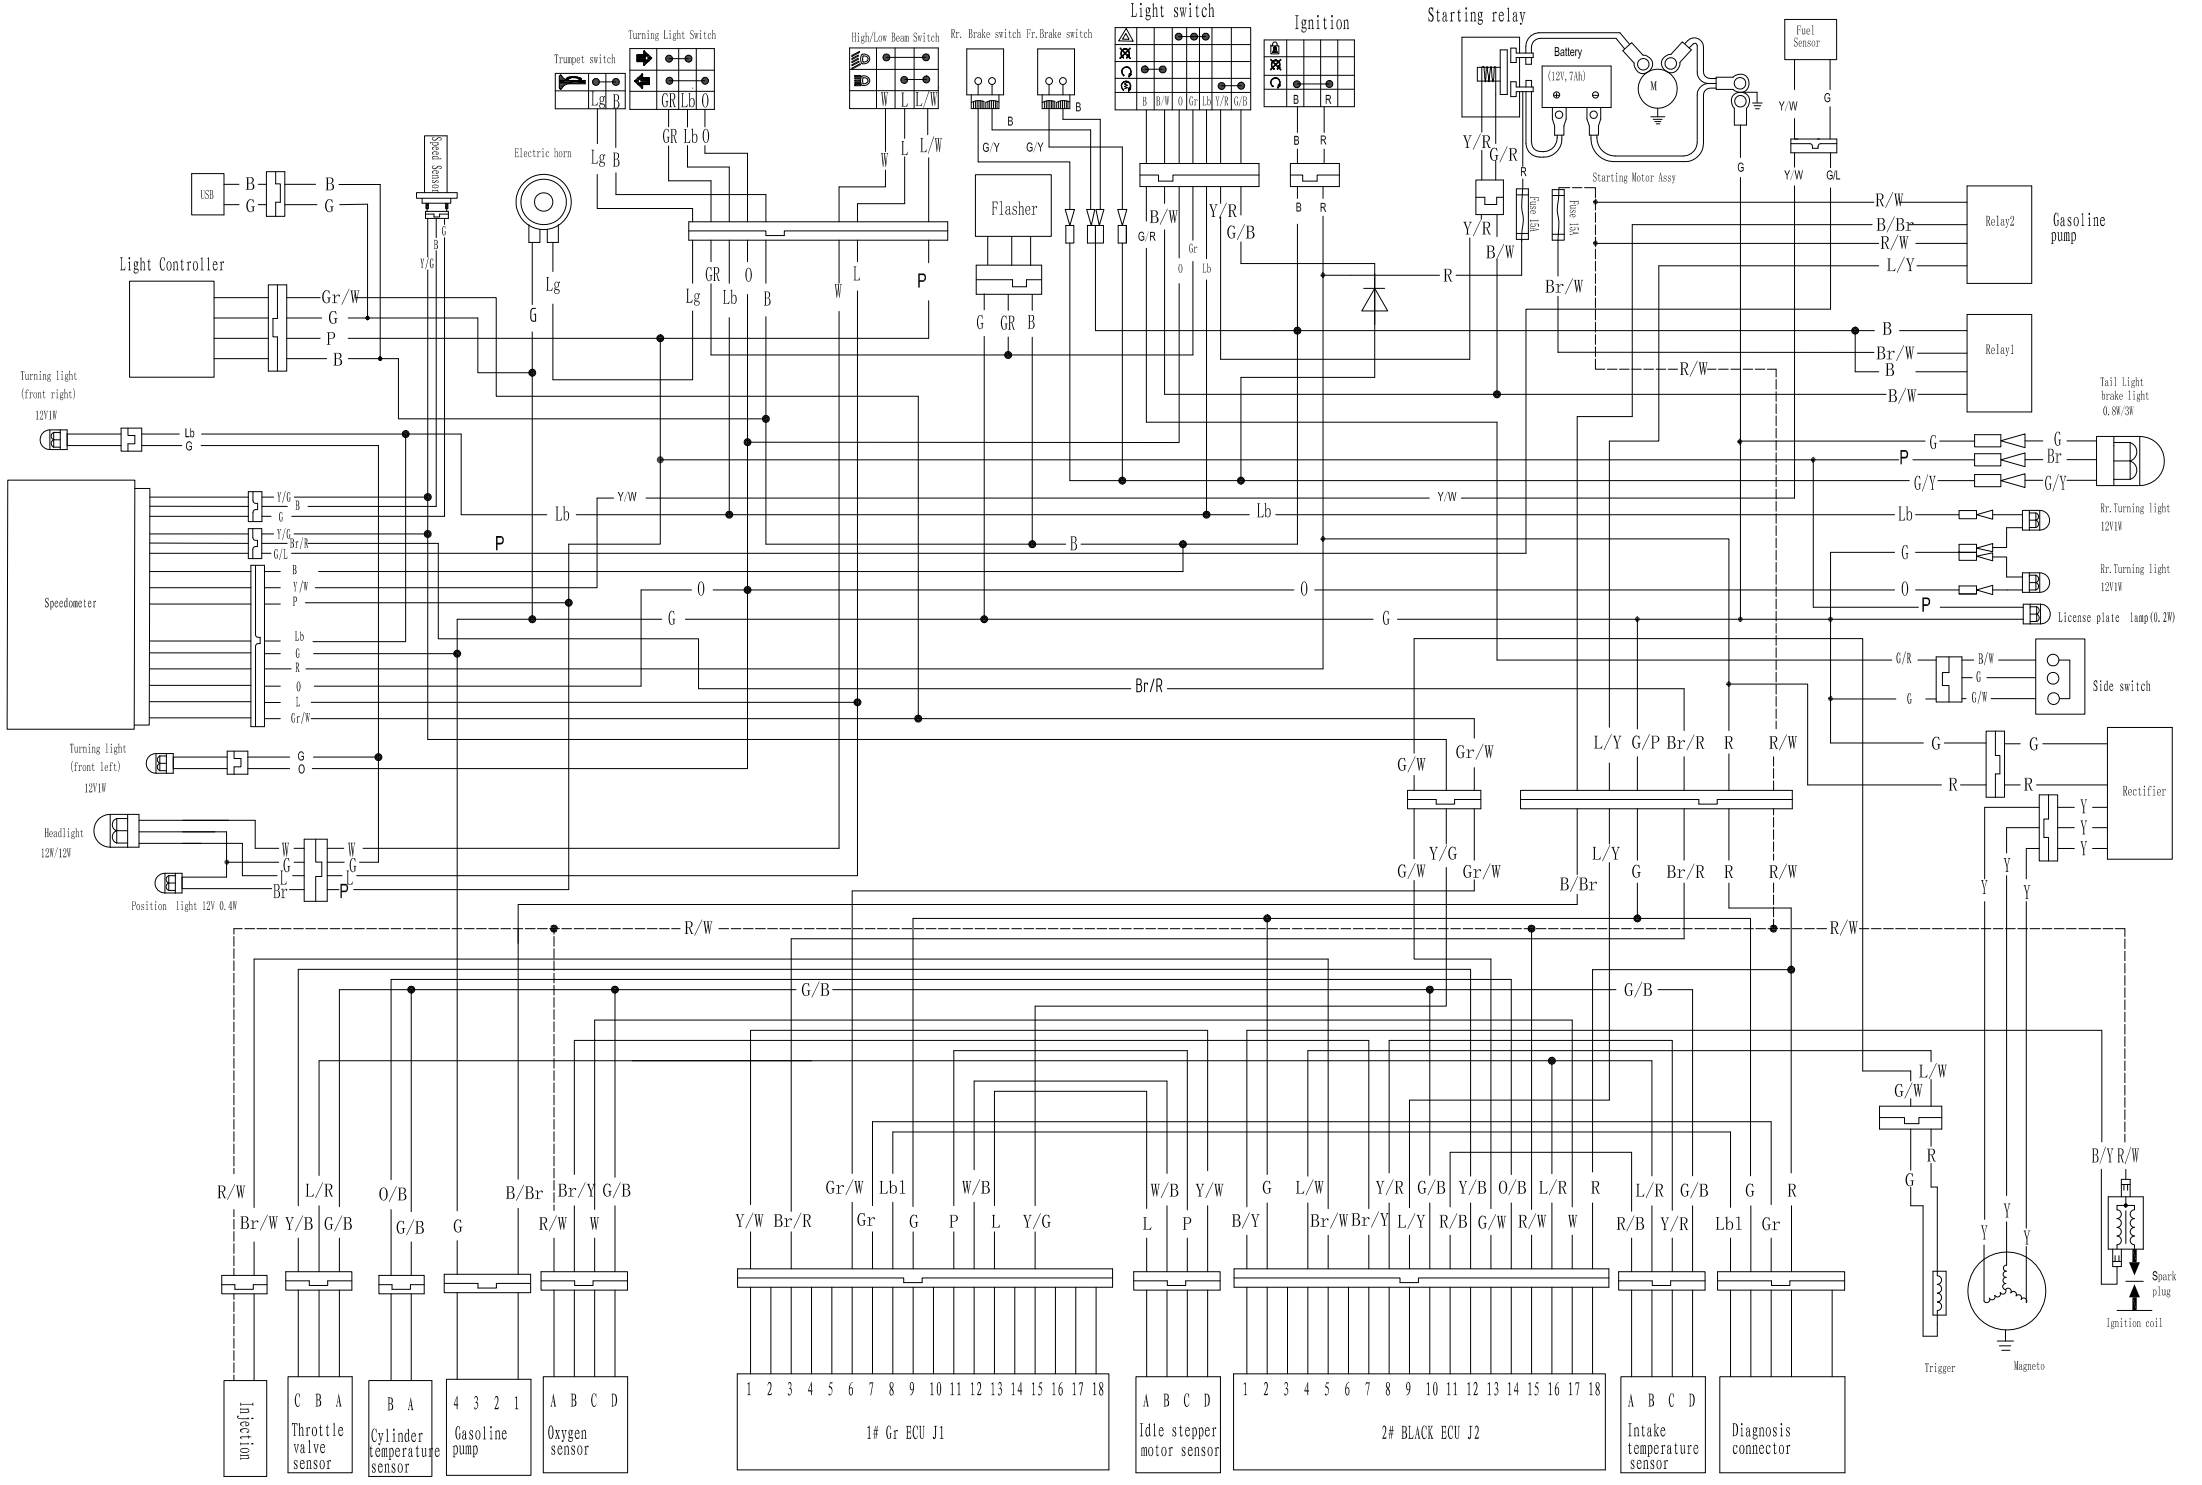
Light switch
Ignition
Starting relay
Turning Light Switch
Trumpet switch
High/Low Beam Switch
Rr. Brake switch
Fr.Brake switch
Battery
(12V, 7Ah)
Fuel Sensor
Starting Motor Assy
Fuse 10A
Fuse 15A
Relay2
Gasoline pump
Relay1
Light Controller
Speed Sensor
Electric horn
Flasher
USB
Turning light (front right) 12V1W
Tail light brake light 0.8W/3W
Rr.Turning light 12V1W
License plate lamp(0.2W)
Side switch
Rectifier
Speedometer
Turning light (front left) 12V1W
Headlight 12W/12W
Position light 12V 0.4W
Spark plug
Ignition coil
Trigger
Magneto
Injection
Throttle valve sensor
Cylinder temperature sensor
Gasoline pump
Oxygen sensor
1# Gr ECU J1
Idle stepper motor sensor
2# BLACK ECU J2
Intake temperature sensor
Diagnosis connector