









- ECU
- 1 Gnd
  - 2 RPM out dash
  - 3 Second Air Valve
  - 4 CPS-
  - 5 Fan RLY
  - 6 Tilt Switch
  - 7 VRK (KEY)
  - 8 Diagnosis
  - 9 Injection
  - 10 Ignition
  - 11 M/L
  - 12 Oxygen sensor
  - 13 CPS+
  - 14 BATTERY+
  - 15 Cylinder TEMP. sensor
  - 16 Speed input/ear in
  - 17 Side switch
  - 18 Fuel PMP

Light switch

Ignition

FUEL PUMP

B/O

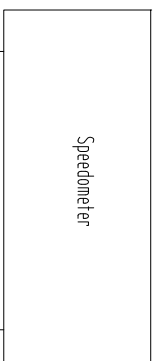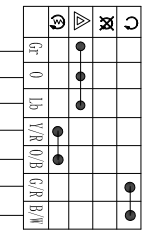

Speedometer

Y/W

B

Br/R

O

L

Y

Lb

G

E


G

Y

R

G

G



Rear Brake Switch

G/Y

B

B

G/Y

B

G/Y

B

B

B


B

B

B

B

B



Front Brake Switch

G/Y

B

B

G/Y

B

G/Y

B

B

B


B

B

B

B

B



Turning light (front right)

Headlight 35W/35W

Ex-light

Turning light (front left)

W

Lb

G

Lb

G

Lb


G

Lb

G

Lb

G



Turning Light Switch

L

Lb

G

Lb

G

Lb

G

Lb

G

Lb

G

Lb

G

Lb



High/Low Beam Switch

L

Lb

G

Lb

G

Lb

G

Lb

G

Lb

G

Lb

G

Lb



Turnpet switch

Lg

B

B

B

B

B

B

B

B

B

B

B

B

B