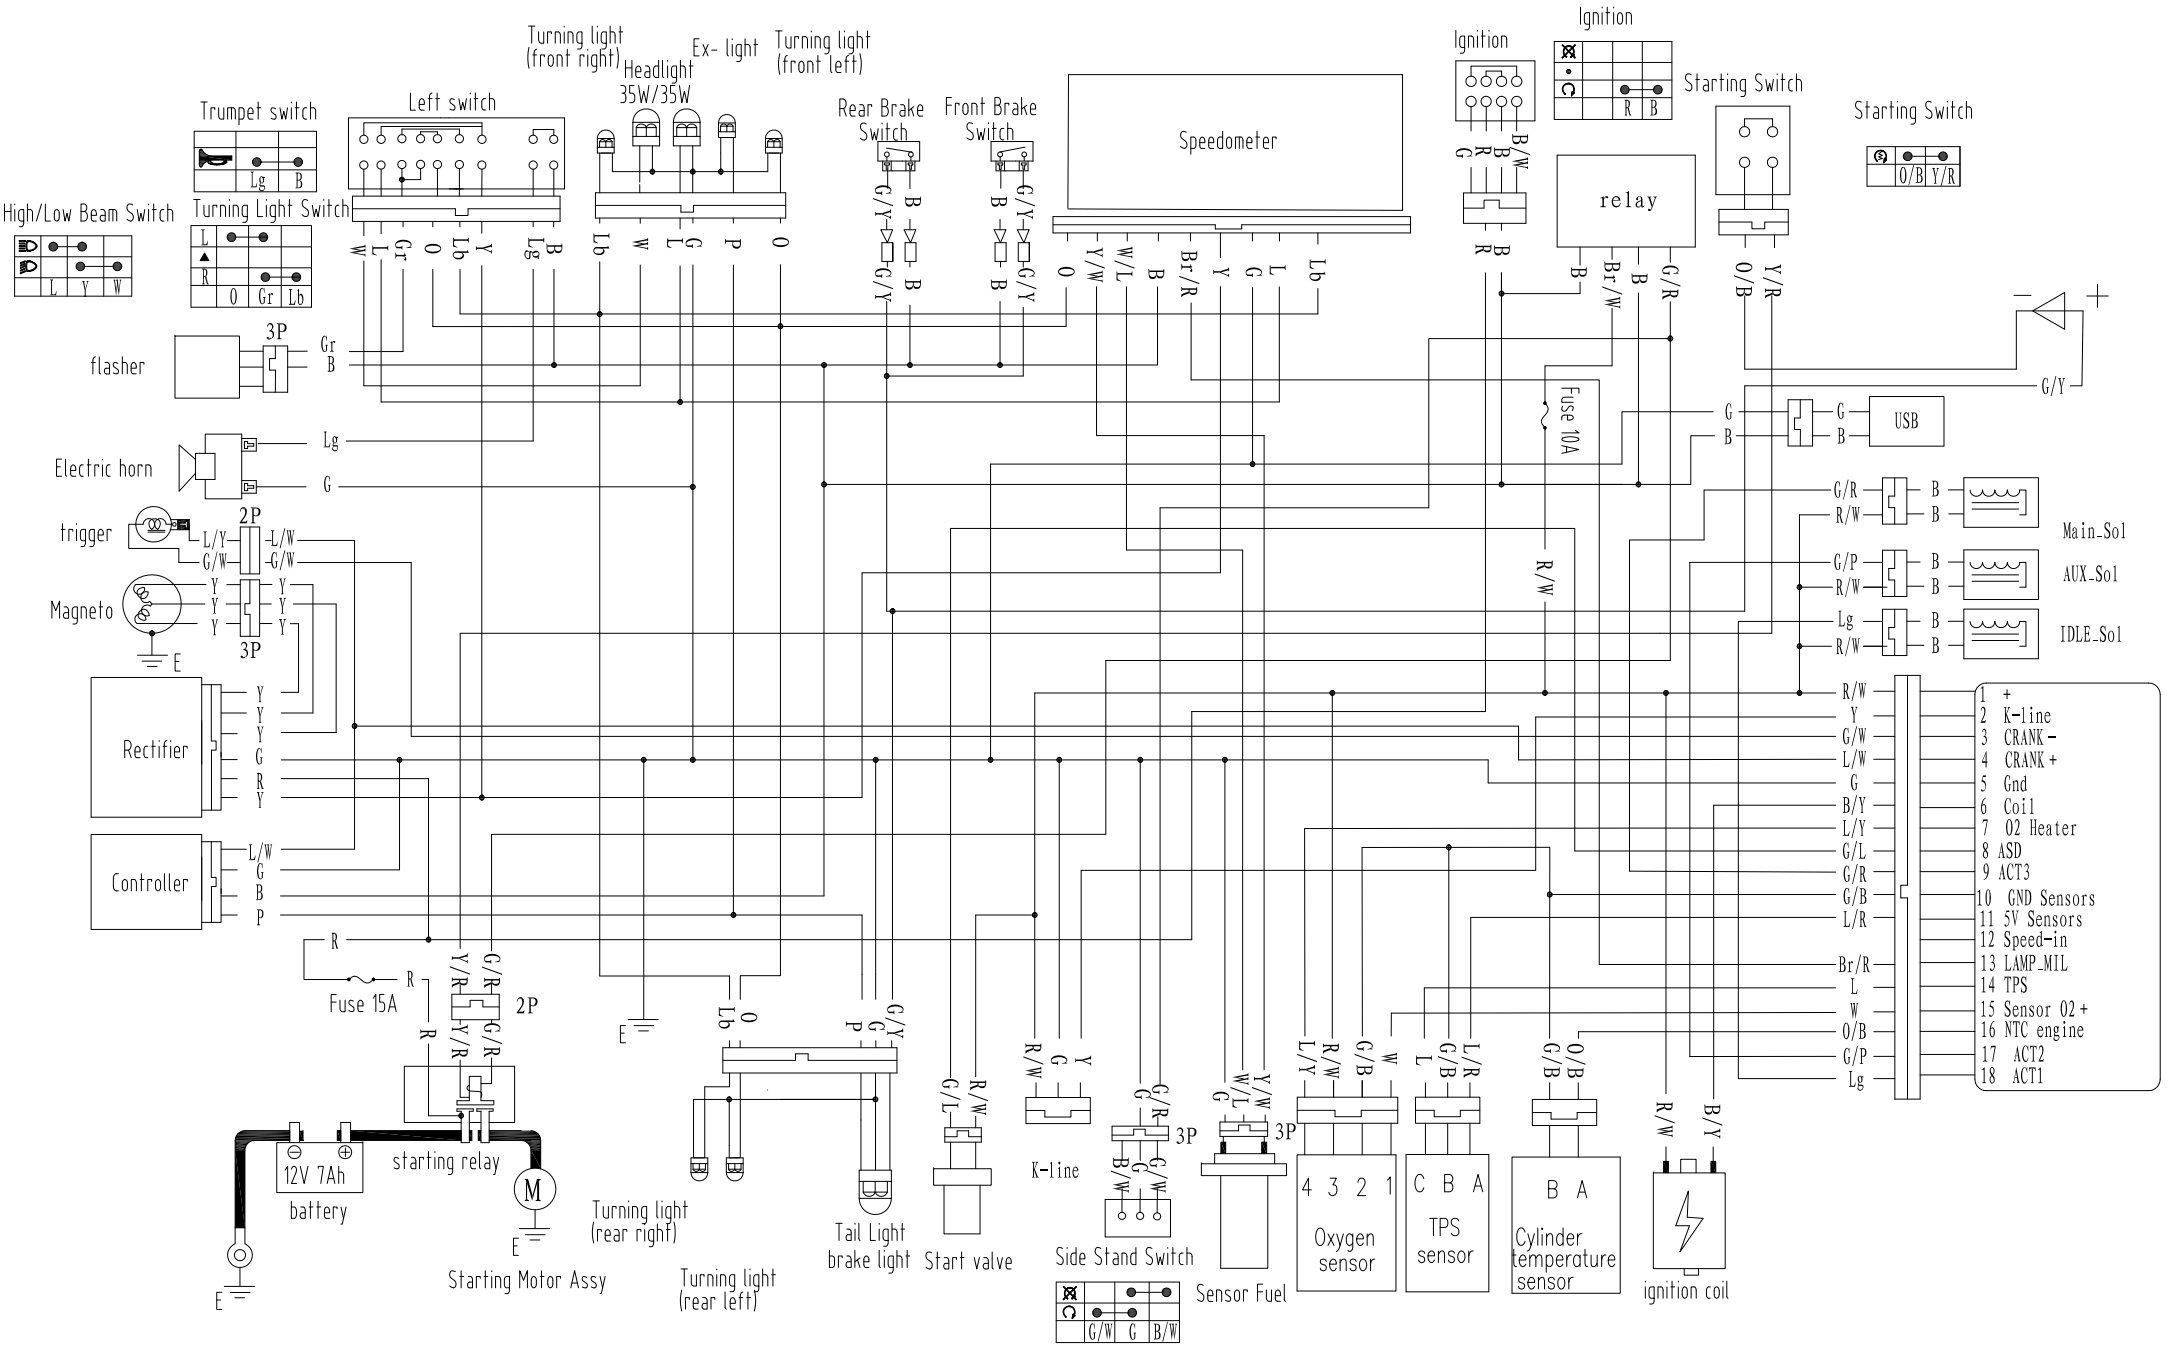
Turning light (front right)
Headlight 35W/35W
Ex- light
Turning light (front left)
Ignition
Ignition
Starting Switch
Starting Switch
Trumpet switch
Left switch
Rear Brake Switch
Front Brake Switch
Speedometer
relay
High/Low Beam Switch
Turning Light Switch
flasher
3P
Gr
B
Fuse 10A
G/Y
USB
Electric horn
Lg
G
trigger
2P
L/Y
G/W
L/W
G/W
Main_Sol
AUX_Sol
IDLE_Sol
Magneto
Y
3P
E
Rectifier
Controller
L/W
G
B
P
R
Fuse 15A
2P
Y/R
G/R
starting relay
12V 7Ah
battery
M
Starting Motor Assy
Turning light (rear right)
Turning light (rear left)
Tail Light brake light
Start valve
K-line
Side Stand Switch
Sensor Fuel
Oxygen sensor
TPS sensor
Cylinder temperature sensor
ignition coil
1 +
2 K-line
3 CRANK-
4 CRANK+
5 Gnd
6 Coil
7 O2 Heater
8 ASD
9 ACT3
10 GND Sensors
11 5V Sensors
12 Speed-in
13 LAMP_MIL
14 TPS
15 Sensor O2+
16 NTC engine
17 ACT2
18 ACT1